



GAMMON TECHNICAL PRODUCTS, INC.
P.O. BOX 400 - 2300 HWY 34
MANASQUAN, N.J. 08736



PHONE 732-223-4600
FAX 732-223-5778
EMAIL gammontech@gammontech.com

**WHITTAKER
NOZZLE
CONNECTOR
WEAR GAUGE**
Bulletin 165
(7-08)


WHITTAKER FUELING NOZZLE CONNECTOR WEAR GAUGE GTP-9192

The Gammon GTP-9192 is to be mounted on a firm surface such as a work bench or a wall. The technician then places the nozzle face against the gauge and attempts to rotate the nozzle as if making a connection to a 3-lug fueling adapter. If the nozzle will rotate, the wear is excessive. If the nozzle will not rotate, the wear is within suggested limits.


NOTE: When a connector is found to be worn, order the replacement 2662319. Whittaker also offers connectors that have stainless steel inserts at the 3 critical wear points. Order part number 2682020. In fact, Whittaker nozzles can be ordered with that special connector by specifying option J.

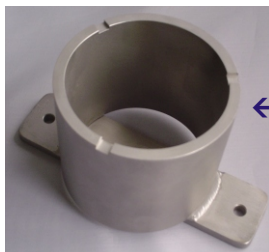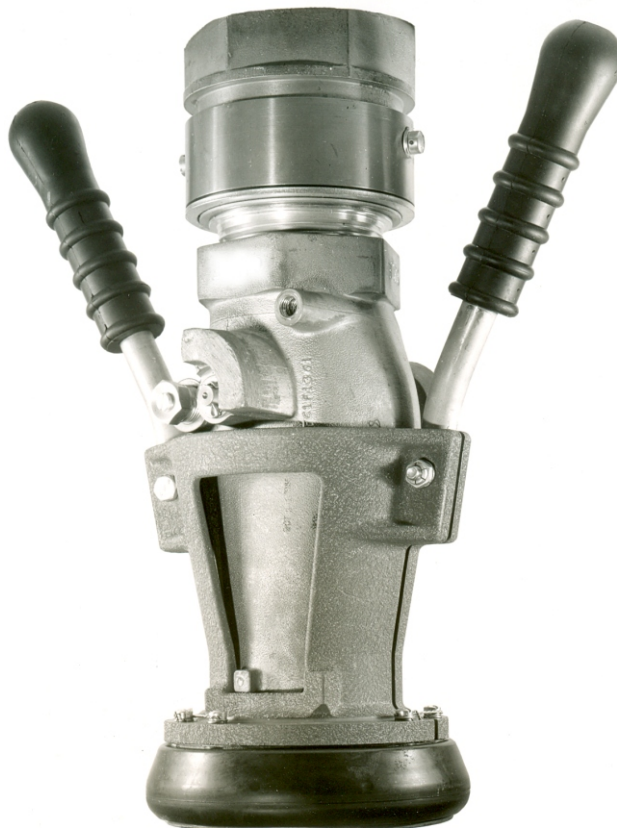

← GTP-9192

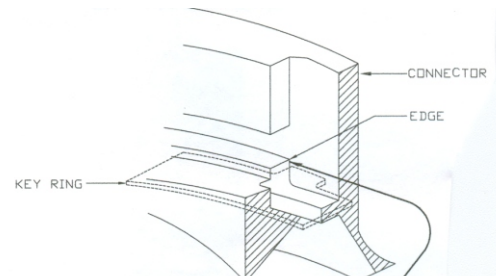

WHEN THE CONNECTOR IS ROTATED CLOCKWISE TO ENGAGE THE FUELING ADAPTER, THE KEY RING (IN DOTTED LINES) IS IMPACTED, AS SHOWN, IF THE CONNECTOR HAS NOT BEEN PUSHED INWARD FAR ENOUGH TO ENGAGE THE 3 ADAPTER LUGS.

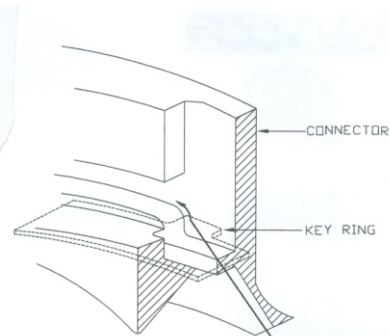

IF THE EDGE IS WORN, OR ROUNDED THE KEY RING CAN RIDE UP THE SLOPE ALLOWING THE NOZZLE TO BE OPENED WITHOUT BEING ATTACHED TO THE ADAPTER